

# Static Discharger Keychain

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Static Discharger Keychain is a compact and easy-to-use device that protects you from static electricity that can build up in metal objects.


Its features include:

**Discharger Pin** — located at the front end of the unit to contact metal objects and disperse their static electricity.

**Neon Lamp Indicator** — flashes when static is discharged.

**LED Light** — helps you find keyholes in the dark.

## OPERATION

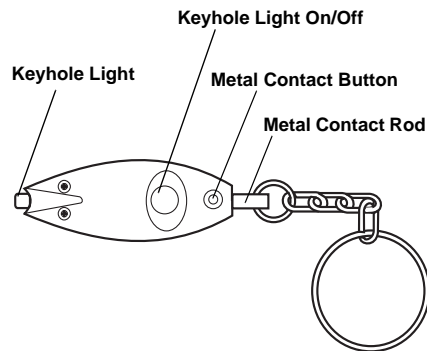

### Using the Static Discharge

1. Hold the metal contact rod at the base of the keychain and touch the metal contact button on the back cover.
2. Touch the front metal pin to any metal object, such as a door knob, to discharge static electricity from the object.

### Notes:

- Static charge might not be completely eliminated, depending on the humidity, the strength of the static charge, and the material of your clothing.
- For the best performance, keep a firm grip on both the keychain and the metal contact button.

### Using the Keyhole Finder

Press the green button on the back cover to turn on the keyhole light. Release the button to turn off the light.

### Replacing the Battery

Your Static Discharger Key Chain comes installed with one CR2032 battery for the keyhole light. When the light dims, replace the battery. For the best performance and longest life, we recommend a RadioShack lithium button-cell battery.

1. Use a Phillips screwdriver to remove the screws of the back cover, then remove the cover.
2. Remove the old battery and insert a new one into the battery compartment with its positive side up.
3. Replace the cover and secure it with the screws.

**Warnings:**

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

**Caution:** Use only a fresh battery of the required size and the recommended type.

**SPECIFICATIONS**

Power .....	1 CR2032 Lithium Button-Cell Battery
Battery Life .....	About 2 Years
Dimensions (HWD) .....	3 x 1 x $11/16$ Inches (76 x 26 x 18 mm)
Weight .....	0.88 oz (25 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

**Limited One-Year Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

63-1111  
05A00  
Printed in Hong Kong